

FARMLAP 2 OPERATION QUICK GUIDE

Explanations below are based around the operator being in the guidance operation screen.

IMPORTANT: To open an existing job or create a new job, please ensure that the unit is put “ON HOLD”.

OPEN EXISTING JOB:

1. Press the “**MENU**” key to enter into the “MAIN MENU”, highlight “**JOBS**” and press “**ENTER**” to enter into the “**JOB**” menu.
2. Highlight “**JOB NAME**” and press “**ENTER**”. The “JOB SELECTION CONFIRMATION” screen will appear. Press “**YES**” to continue to the “JOB SELECTION” menu.
3. Highlight “**JOB NAME**” and press “**ENTER**”, cycle through using ▲ ▼ keys to find the correct Job.
4. Once the correct Job is viewed in “**JOB NAME**”, press “**ENTER**” to select that job.
5. Press the “**AUTOSTEER**” button on the USB Button Box to exit back to the guidance operation screen or press “**EXIT**” a number of times until the guidance operation screen is displayed.

CREATING NEW JOB:

1. Press the “**MENU**” key to enter into the “MAIN MENU”, highlight “**JOBS**” and press “**ENTER**” to enter into the “**JOB**” menu.
2. Highlight “**JOB NAME**” and press “**ENTER**”. The “JOB SELECTION CONFIRMATION” screen will appear. Press “**YES**” to continue to the “JOB SELECTION” menu.
3. Highlight “**JOB NAME**” and press “**ENTER**”.
4. At the bottom left of the screen, a “**NEW**” key will appear, press this key.
5. A “CREATING JOB” screen will appear for a few seconds then the “JOB SETUP” screen will be displayed.
6. The operator is allowed to select or create a new farm, field and activity and select a rig. Rigs are created in the machine menu. To select a new farm, field, activity or rig highlight the menu and press “**ENTER**”. Use the ▲ ▼ arrow keys to select the correct one. To add a new farm, field or activity highlight the menu and press “**ENTER**” then press “**ADD**” on the bottom left of the screen. The menu will go blank and allow the operator to add a new name to the list by using the ▲ ▼ and ◀ ▶ arrow keys.
7. Once completed press “**ENTER**” twice to confirm the entry.
8. Once the farm, field, activity and rig is correct press “**EXIT**” once to go back into the “JOB SELECTION” menu and press “**EXIT**” again to display the “**JOB**” menu. The operator has the option to enter more details related to the job such as the operator, weather conditions and comments or keep pressing “**EXIT**” until the operation screen is displayed.

NOTE: When in the “JOB” menu as explained in step 8 above, the operator needs to ensure that the calibration setup under the TANK 1 menu is completed and correct. Product information is entered in the TANK 1 menu and depending on what MASTER CONTROL is selected (see CREATING NEW RIG step 6) Tank Volume, Flow Calibration and Target Spray Rate is also entered in the TANK 1 menu.

CREATING NEW RIG:

1. Press the **"MENU"** key to enter into the "MAIN MENU", highlight **"MACHINERY"** and press **"ENTER"** to enter into the "MACHINE SETUP" menu.
2. Highlight **"RIG"** and press **"ENTER"**.
3. At the bottom left of the screen, a **"NEW"** key will appear, press this key. The menu will go blank and allow the operator to add a new name to the list by using the **▲ ▼** and **◀ ▶** arrow keys.
4. Once completed press **"ENTER"** to confirm the rig name.
5. Highlight **"LAYOUT"** and press **"ENTER"**. Enter in the layout requirements. Press **"EXIT"** to go back to the "MACHINE SETUP" menu.
6. Highlight **"MASTER CONTROL"** and use the **▲ ▼** to select the correct control option for the rig.
7. Once completed press **"ENTER"** to confirm the control option.
8. Highlight **"CONTROL"** and press **"ENTER"**. Enter in the calibration options and values.
9. When completed press the **"AUTOSTEER"** button on the USB Button Box to exit back to the guidance operation screen or press **"EXIT"** a number of times until the guidance operation screen is displayed.

MENUS

JOBS:

JOB NAME: The name of the current job.

OPERATOR: The name of the operator carrying out the job.

CONDITIONS: The conditions for Wind Speed, Wind Dir, Temperature, Humidity and the Soil Conditions.

COMMENTS: General Comments.

TANK 1: To add the products for each tank and calibration figures.

FARM: The Farm where the job will take place.

FIELD: The Field/Paddock that the job will take place.

ACTIVITY: The activity taking place for that job.

RIG: The machine used for the job.

SYSTEM:

GPS SET UP: Information and settings about the GPS and GPS Com Port.

DISPLAY UNITS: To change system units from Metric to US Imperial.

BOUNDARY CREATE: Choose either "YES" or "NO" to whether field boundaries are created.

COVERAGE MIN: The minimum distance between coverage lines on the screen.

BRIGHTNESS: To change the screen brightness. (Not Applicable for 5500)

DATA DRIVE: To select the drive wishing to export or import to, e.g. USB drive = removable disk.

MAXIMUM RATE: Only applicable if 5206 is selected in "MASTER CONTROL". Entering the maximum rate that will be sprayed allows coverage lines to have a colour reference which corresponds to the rate that is being applied.

NUDGE AMOUNT: The amount that the runlines are moved with each push of the nudge button.

SHOW MAP: Either "YES" or "NO" to show or hide the rate polygons on an imported rate map.

TAG NAMES: To change the default TAG to something more descriptive.

MACHINERY:

RIG: Name of the Rig being used to carry out a job.

LAYOUT: To enter the layout of the machine and settings for the Rig. Eg Antenna Offset

MASTER CONTROL: Various options that Farmlap can be used with, Auto Spray Boom 5206, Auto Spray Boom 5207 etc. If Farmlap is being used as guidance only set this to Screen.

CONTROL: The calibration options and values that enable the selected master control to operate correctly. Eg Section Widths

AUTOSTEER: Select either Autosteer_V2 or none.